

FARMTRAC PARTS AVAILABLE

<u>PART NO.</u>	<u>PART NAME</u>
305061S2	PIN-3/16*0.8125-SPRING
305086S2	PIN-3/16*1.25-SPRING
789557	KITREPAIRDANFOSS
86196-S36	ADAPTER**USEESL10648**
87057-S94	O'RING1.25ID*0.139W
ESL10008	"O"RING9/16ID*0.013W
ESL10010	"O"RING
ESL10011	"O"RING-0.50ID*0.07W
ESL10021	SEALORING0.087"X0.644"
ESL10022	SEAL
ESL10023	BOLT-HYDRAULICSPPOOLVALVE
ESL10024	SEAL-0.424ID*0.103W
ESL10060	CAP-OILFILLERTUBE
ESL10083	FILTER ASSEMBLY LUBE OIL
ESL10085	ORING
ESL10131	SCREW VALVE ROCKER ARM
ESL10200	GASKET-OILPAN
ESL10201	GASKET-OILPANDRAINPLUG
ESL10203	PUMPASSEMBLY-ENGINEOIL
ESL10213	BASE ASSEMBLY-PRE-CLEANER
ESL10221	FILTERELEMENT-PRIMARY
ESL10222	FILTERELEMENT-SAFETY(INNER)
ESL10238	SENSOR-WATERTEMPERATURE
ESL10245	GASKET-MUFFLERINLETPPIPE
ESL10250	TANK ASSY-FUEL
ESL10254	FUEL TANK CAP (LOCKING)
ESL10257	TAP&SCREENASSEMBLY-FUEL
ESL10273	TUBE ASSY-FILTER TO PUMP
ESL10293	CLAMPASSEMBLY
ESL10296	CLAMP-SPRINGWIRE
ESL10297	CONNECTION RETURN TO TANK
ESL10298	CLAMPASSY-FUELTUBERETURN
ESL10357	SEALING WASHER
ESL10457	DISC-THROTTLECONTROLFRICTION
ESL10464	LOCK-THROTTLECANUSETX10472
ESL10468	CONTROLASSEMBLY-FUELSHUTOFF
ESL10480	SPRING FOOT ACCELEATOR PEDAL
ESL10482	PAD&HUBASSEMBLY
ESL10483	SPRING
ESL10494	HOSE RADIATOR UPPER 545/555/665
ESL10495	HOSE CLAMP UPPER 545/555/665/435/535
ESL10496	HOSELOWER-RADIATOR

FARMTRAC PARTS AVAILABLE

ESL10502	GASKET-WATEROUTLETCONNECTION
ESL10503	CONNECTION WATER OUT LET 545/555/665
ESL10512	GASKET WATER PUMP
ESL10520	WATER PUMP ASSEMBLY 545/555/665
ESL10521	SEAL ASSEMBLY FRONT WHEEL HUB
ESL10522	BEARINGASSY-FRONTWHEELINNER
ESL10524	BEARING ASSY-FRONT WHEEL OUTER
ESL10526	CAP FRONT WHEEL HUB GREASE
ESL10528	HUB FRONT WHEEL
ESL10529	BUSH FRONT WHEEL HUB
ESL10547	SEAL-SPINDLEPINDUST
ESL10555	PLATE&NUTASSY-AXLESUPPORT
ESL10560	SEAL LOWER-SPINDLE
ESL10561	SEAL UPPER-SPINDLE
ESL10564	SPACER-SPINDLEFRONT
ESL10567	SPINDLEBUSHSET
ESL10610	ARM-STEERING SPINDLE
ESL10613	PLUG
ESL10620	ENDASSEMBLY-CYLINDER
ESL10695	BEARINGASSY-CLUTCHRELEASE
ESL10696	DISKASSEMBLY-MAIN(11")
ESL10716	DUALCLUTCHASSY11X8.5
ESL10735	BALL-3/8-RAILDETENT
ESL10738	GASKET-GEARSHIFTHOUSING
ESL10748	BALL-MAINSHIFTLERSPRING
ESL10753	SWITCHASSEMBLY-TRANSMISSION
ESL10756	PLUNGER-SAFETYSTARTERSWITCH
ESL10757	HARNESSASSY-TRANSMISSION
ESL10759	INDICATORASSY-TRANSOIL
ESL10772	SNAP RING
ESL10781	GASKET-CLUTCHBRGHUBSUPPORT
ESL10785	GASKET-RELEASEBRGPLATE
ESL10794	GEAR,3rd SPEED
ESL10801	BEARING ,TRANSMISSION OUTPUT SHAFT
ESL10802	GASKET-OUTPUTRETAINERPLATE
ESL10840	GASKET-GEARBOXTOCENTERHSG
ESL10841	GASKET-HYDRAULICLIFTCOVER
ESL10845	GASKET-HANDBRAKECOVER
ESL10852	GEAR DIFFERENTIAL SIDE LH
ESL10853	GEAR DIFFERENTIAL SIDE RH
ESL10854	SPIDER REAR AXLE DIFFERENTIAL
ESL10883	GASKET-(0.152/0.203MMTHICK)
ESL10888	SEAL REAR AXLE HSG. INNER 435
ESL10899	GASKET-PTOSHIFTERPLATE
ESL10901	O-RING,.625ID*.103(87035)

FARMTRAC PARTS AVAILABLE

ESL10902	SPRING-PTOSHIFTERARM
ESL10903	BALL-PTOSHIFTERARMSRING
ESL10905	FORK PTO SHIFTER
ESL10906	SLEEVE PTO COUNTER SHAFT
ESL10908	SHAFT PTO REAR
ESL10912	SNAP RING PTO SHAFT
ESL10913	SLEEVE PTO SHAFT NH310087
ESL10916	GASKET-PTOSHAFTREARCOVER
ESL10927	BUSH-REARAXLEHOUSINGOUTER
ESL10928	SEAL ASSEMBLY-OUTER HOUSING
ESL10931	BEARING ASSY-TAPER ROLLER
ESL10933	SEAL ASSY REAR AXLE OUTER
ESL10934	DISC&LININGASSEMBLY-FRICTIO
ESL10935	ACUATOR ASSY DISC BRAKE
ESL10943	GASKET-OUTERBRAKEHOUSING
ESL10947	SEAL ASSY REAR AXLE HSG. OUTER
ESL10950	BOOT-BRAKECAMSHAFT
ESL10952	CLAMP-BRAKECAMSHAFT
ESL10970	PAWL-PARKINGBRAKELEVER
ESL10974	SHAFT BRAKE CROSS
ESL10977	SEAL BRAKE PEDAL SHAFT
ESL10992	SEAL'O'RING-13/16ID*0.103W
ESL10999	DISC-LIFTCONTROLFRICTION
ESL11005	KNOB-HANDLE
ESL11006	STOP-LIFTCONTROLLEVER
ESL11007	KNOB-LIFTCONTROLSTOP
ESL11010	SEAL-0.364ID*0.066W
ESL11011	SEAL-0.489ID*0.13W
ESL11028	HYDRAULICLIFTASSY(FCVALVE)
ESL11030	O'RING-0.562ID*0.07W
ESL11074	ARM ASSEMBLY HYDRAULIC RH
ESL11075	ARM ASSEMBLY HYDRAULIC LH
ESL11079	O'RING-HYDRAULICLIFTPISTON
ESL11080	SEALINGRING-HYDRAULICLIFTPI
ESL11099	TUBE-HYDRAULIC
ESL11103	RING-SNAP
ESL11112	FILTER & PIPE ASSEMBLY-INTAKE 10063150
ESL11135	CHECKCHAINASSEMBLY-LINK
ESL11136	CLEVIS-LOWER LIFT LINK
ESL11143	PIN-LINKTOLIFTARM
ESL11149	GEAR-HYDRAULICLIFTLEVELINGL
ESL11151	LEVER-HYDRAULICLIFTLEVELING
ESL11164	ROD ASSEMBLY LH 435/535
ESL11166	BOXASSEMBLY-LIFTLEVELING
ESL11169	SPRING-DRAWBARPIN
ESL11186	SEAL

FARMTRAC PARTS AVAILABLE

ESL11202	GASKET-FLOWCONTROLVALVE
ESL11203	FOLLOWER-FLOWCONTROLVALVE
ESL11204	SHIM-FLOWCONTROLVALVE
ESL11238	O'RING-1.125ID*0.139W
ESL11255	HYD.FILTERASSEMBLY
ESL11268	ELBOW-PRESSURETUBE
ESL11269	ELBOW-PUMPINLET
ESL11339	ALTERNATOR®ULATORASSY
ESL11360	KNOB-LIGHTSWITCH
ESL11362	KEY-IGNITIONLOCK
ESL11390	FLOATASSY-FUELTANKSENDER
ESL11397	LAMP-GENERATORWARNING
ESL11400	SWITCHASSEMBLY-OILPRESSURE
ESL11403/13715	CABLE ASSEMBLY-TACHOMETER 10019320
ESL11408	O'RING
ESL11409	SHAFT AND CABLE ASSEMBLY 10069740
ESL11500	PLATE
ESL11501	RIVETHOODLATCH
ESL11507	PAD-HOODMOUNTING
ESL11521	CLIP-HOODSUPPORTROD
ESL11534	SUPPORTROD-HOODPANELRH
ESL11554	STEP-RUNNINGBOARD-LH
ESL11610	DECAL-MI-CENTRELH
ESL11611	DECALRH
ESL11613	DECAL-MI-REARLH
ESL11614	DECAL-MI-REARRH
ESL11672	WASHER
ESL11695	WASHER-DISCTO REAR AXLE
ESL11747	BOLT-FRONTWHEELHUB
ESL11754	BOLT
ESL11758	BOLT-REARWHEELDISC
ESL11761	BANJOBOLT
ESL11763	BREATHERBOLT
ESL11778	BANJOBOLT
ESL11793	NUT-FRONTWHEELBOLT
ESL11797	LOCKNUT
ESL11808	NUT-DISCTO AXLE FLANGE
ESL11810	NUT REAR AXLE BEARING
ESL11823	NUT-BEZELRETAINING
ESL11825	NUT-U-TYPE
ESL11828	NUT-HOODLHPANEL
ESL11830	NYLOCKNUTM5
ESL11875	SCREW ADJUSTING, BRAKE
ESL11877	PIN-DRAWBARCLEVIS
ESL11889	SCREW-BEZELRETAINING
ESL11933	SCREW-8-18*0.625-PANHEAD

FARMTRAC PARTS AVAILABLE

ESL11951/10621	TIERODASSY
ESL11954	ALT®ULATORASSY-35AMP
ESL11996	GROMMETCOMBINATIONSWITCH
ESL11999	RADIATOR & SHROUD ASSY.
ESL12034	PISTON RING KIT STD.10074730
ESL12039	BELTDRIVECOGGED
ESL12046	WASHER
ESL12057	INJECTORASSY
ESL12068	FUEL TANK CAP-NON LOCKING
ESL12070	CAP & EXTENSION ASSY.
ESL12079	PEDALASSEMBLYFOOTACCELERATO
ESL12081	CHECKCHAINANDBRACKETASSY
ESL12082	CHAIN ASSEMBLY-INTERNAL
ESL12087	PIN
ESL12089	PISTON SET-FT60 10074700
ESL12226	WHEEL ASSY. FRONT 6.00X16 TYRE
ESL12291	SWITCH,LIGHT(ROTARY)
ESL12412	NUT SLOTTED HEX 1"-12
ESL12426	MUDSHIELD&RETAINERASSEMBLY
ESL12490	COIL ASSY COOLING PS
ESL12491	TUBE ASSY-PUMP TO GEAR
ESL12492	TUBE ASSY GEAR TO COOLER
ESL12493	TUBE ASSY RIGHT TURN P.S
ESL12494	TUBEASSY-GEARTOCYLINDERLH
ESL12501	STEERPUMP/REBUILDKIT789557
ESL12505	55AMPALTERNATOR
ESL12507	ADAPTOR,STEERINGMOTOR
ESL12532	OILSEAL,REARPTOSHAFT
ESL12560	INSTCLUSTERASSY
ESL12573	SWITCHP/LAMP
ESL12590	CLIP-PIN
ESL12604	COUPLING(WITHREDPLUG)
ESL12605	COUPLING(WITHBLUEPLUG)
ESL12610	RUBBERBEADING
ESL12640	CABLE-HANDTHROTTLE
ESL12649	CABLE-FOOTTHROTTLE
ESL12687	KNOB-HANDTHROTTLE
ESL12694	RADIATOR&SHROUDASSEMBLY
ESL12698	SPINDLE ASSEMBLY RH
ESL12699	SPINDLE ASSEMBLY LH
ESL12713	CYLINDERASSEMBLY
ESL12714	TIE ROD ASSEMBLY
ESL12723	TUBE ASSY. PUMP TO STRG. UNIT
ESL12731/12524	CLAMP ASSY - TUBING POWER STE
ESL12750	PUMPASSEMBLY-HYDRAULIC
ESL12752	"O"RING

FARMTRAC PARTS AVAILABLE

ESL12778	PIN
ESL12787	BEARING, CLUTCH PTO RELEASE
ESL12822	CLUTCHASSEMBLY
ESL12888	ROLLPIN
ESL12923	SENSOR
ESL12938	BEARING
ESL12947	OIL SEAL
ESL12953	BEARINGNEEDLES
ESL13034	PIND.5X26
ESL13035	PTO CLUTCH
ESL13036	BALLD.1/4"
ESL13055	KNOB
ESL13059	PIND.6X28
ESL13074	O' RING
ESL13082	BOLTREARWHEEL
ESL13094	BUSH
ESL13238	KNOB(YELLOW)
ESL13241	KNOB(RED)
ESL13248	DISTRIBUTOR ASSY.
ESL13259	LIFT ROD ASSY LH/RH 665
ESL13264	LINCHPIN
ESL13266	PIN-FULCURM
ESL13269	SCREW-SELFLOCKINGM16
ESL13279	O'RING
ESL13281	PUMP ASSEMBLY STG 665
ESL13289	HOSEASSY,CYL.
ESL13302	COOLER ASSY HYD. OIL
ESL13303	BEARING ASSY, FRONT WHL SPINDL
ESL13324	GASKET,ENGINEFRCOVER
ESL13342	SPRING,BRAKEPEDALRETURN
ESL13498	SWITCHASSY,LIGHTING(PULL)
ESL13499	SWITCHASSY,STARTER
ESL13501	HORNBUTTONASSY
ESL13504	SWITCHASSY,STOPLAMP
ESL13506	CLUSTERASSYINST
ESL13518	ADAPTER ASSY, TACHODRIVE
ESL13523	BULB,HEADLAMP(12V)
ESL13524	BULB,WORKLAMP
ESL13537	LATCHASSY,HOOD
ESL13600	BOXASSYTOOL
ESL13641	EMERGENCYFLASHERSWITCH
ESL13658	TUBE, HYD CNTRL VLV, RH UPPER
ESL13660	SEALINGWASHER
ESL13672	O'RING
ESL13703	GASKET,PUMPTOBLOCK
ESL13705	WIRINGHNESS,MAIN

FARMTRAC PARTS AVAILABLE

ESL13711	WIRINGHNESS,INST.PANEL	
ESL14000	OIL FILTER PERKIN	
ESL14204	SEALKITPOWERSTEERINGCYL	
ESL14207	CYLINDER LINER	
ESL14208	CYLINDERLINERSEAL	
ESL14221	MAIN BEARING SET STANDARD 10073760 430/435	
ESL14230	GASKET,OILSUMP	
ESL14234	PLUG,CYLINDERBLOCK	
ESL14239	ENGINE OVERHAULING SET	
ESL14251	CAP,OILFILLING	
ESL14256	SEAL,CYLINDERHEADCOVER	
ESL14268	COTTER,VALVE	
ESL14276	WASHERNOZZLEHOLDER	
ESL14283	GASKET CYL HEAD 3.215	
ESL14287	BOLT,CYLINDERHEAD	
ESL14289	PISTON ASSEMBLY (ENGINE SET WI 10072450	
ESL14291	CONNECTING ROD ASSEMBLY	
ESL14309	GASKET,INSPECTIONCOVER	
ESL14311	GASKETTIMINGGEARCOVER	
ESL14320	OILSEAL(VITON)	
ESL14374	HOSE,AIRCLEANEROUTLET,LOWE	
ESL14377	MUFFLERASSEMBLY(VERTICAL)	
ESL14403	SEALINGWASHER	
ESL14415	WATER SEPARATOR ASSY	
ESL14442	GASKET WATER PUMP	435/535
ESL14443	DRIVEBELT,RUBBER"	
ESL14448	RADIATOR & SHARROUD ASSY	435/535
ESL14454	HOSE,LOWER	
ESL14456	HOSE RADIATOR TOP	435/535
ESL14461	THERMOSTATUNIT	
ESL14462	GASKET,THERMOSTATHOUSING	
ESL14469	CLUTCH ASSEMBLY LIVE PTO 12"x11"	
ESL14481	RETAINER,SEALOUTERHOUSING	
ESL14497	GASKETHYDRAULICPUMP	
ESL14510	STARTERMOTORASSEMBLY	
ESL14523	CABLEASSEMBLY,TACHOMETER	
ESL14524	TEMP.SENSOR	
ESL14552	BRACKETOILFILTER	
ESL14598	COVERASSEMBLY	
ESL14599	FILTER KIT P&S (FUEL) ESC D10075050	
ESL14818	TUBEASSYPOWERSTEERING	
ESL14907	ROTARYPUMPINJECTOR	
ESL14910	SPINDLEASSEMBLY,LH	
ESL14911	SPINDLEASSEMBLY,RH	
ESL14953	WRGHARNESS-INSTRUMENTPANEL	
ESL15001	BOLTM12X33	

FARMTRAC PARTS AVAILABLE

ESL15113	ORING
ESL15129	GEAR Z=20
ESL15148	GEARTRANSMSNF0URWHEELDRIV
ESL15149	GEARTRANSMSNF0URWHEELDRIV
ESL15150	BEARINGCYLINDRICALROLLER
ESL15155	WASHER22.2X34.6BELLEVILLE
ESL15160	WASHERM18CONICALSPRING
ESL15178	BOLT5/16-24X1.125HEXHEAD
ESL15188	SWITCHASSYHEATERANDIGNITIO
ESL15192	BOXASSYFUSE
ESL15193	HARNESSASSEMBLYMAIN
ESL15203	BOLTM12X1.5X1.44CYLINDERHEA
ESL15205	GASKET CYLINDER HEAD555
ESL15206	GASKETCYLINDERHEAD
ESL15221	GASKETREARPLATE
ESL15222	GASKETTIMINGCOVER
ESL15223	GASKETSEALCARRIER
ESL15227	GASKETOILFILTERMOUNTING
ESL15230	WASHEROILFILTERBODY
ESL15237	SEAL CRNKSHAFT FRONT 535948
ESL15238	SEALASSYCRANKSHAFTREAROIL
ESL15242	GASKETEXHAUSTMANIFOLD
ESL15243	GASKETOILPAN
ESL15248	BOLTM10X1.50X45-10.9HEXHEAD
ESL15250	SEALORING0.103X1.75
ESL15262	RODVALVEPUSH
ESL15264	BOLTM12X1.5X216CYLINDERHEAD
ESL15271	SEALVALVESTEM
ESL15273	GASKETVALVEROCKERARM
ESL15287	PISTON 4.2 AVL45 FT545
ESL15297	BEARINGCONNECTINGROD
ESL15305	GASKETENGINEAIRINTAKEMANIF
ESL15313	GASKETMUFFLERINLET
ESL15318	SWITCHTHERMOSTART
ESL15319/ESL10258	FILTERFUELTAP7SCREEN
ESL15321	TUBEASSEMBLYFUELTANKTOFIL
ESL15323	GASKETVEPUMP
ESL15328	FUELFILTERASSY(SPINTYPE)
ESL15333	TUBEASSMBLYFUELINJECTIONCY
ESL15334	TUBEASSMBLYFUELINJECTIONCY
ESL15335	TUBEASSMBLYFUELINJECTIONCY
ESL15354	EXCHANGE FILTER (SECONDARY)
ESL15357	EXCHANGE FILTER (PRIMARY)
ESL15358	AIRVENTSCREW
ESL15359	FLATSEALRING
ESL15360	HOSE CLAMP LOWER 545/555/665

FARMTRAC PARTS AVAILABLE

ESL15361	RADIATOR & SHARROUD ASSY 545/555/665
ESL15363	THERMOSTAT**USEESL15207**/ESL13310
ESL15366	GASKETWATERPUMP
ESL15388	PISTON SET 545
ESL15422	COPPERWASHER
ESL15441	SEALORING
ESL15503	FILTERANDADAPTERASSY
ESL15552	RING SET 60/70
ESL15568	FUELLINE
ESL15579/ESL13716	CABLEASSEMBLY,TACHOMETER
ESL15593	HPPIPE,3RDCYLINDER
ESL15593	HPPIPE,3RDCYLINDER
ESL15594	HPPIPE,2NDCYLINDER
ESL15595	HPPIPE,1STCYLINDER
ESL15600	WORKLAMPASSEMBLY
ESL15615	SEALINNER
ESL15620	HYDFILTER**USEESL11255**
ESL15656	DROPBOXASSY
ESL15798	OIL FILTER PERKIN
ESL15866	NUTM18X1.5RRWHEELBOLT
ESL15876	TUBEASSYFILTERTOFEEDPUMP
ESL15877	TUBEASSYHANDPRIMERTOFIP
ESL15896	BOOT-HEADLAMPTOGRILL
ESL15900	HYDRAULICFILTER

Manuals Available :-

PARTS BOOK 435 - 535
PARTS BOOK 545 - 555
PARTS BOOK 665 - 665DTC

Disclaimer :-

These are the general parts availability and some parts may be out of stock at any given time.